

Instruction Sheet Installation of Universal Roll-Up Blind Retrofit Kit

Universal Roll-Up Blind Retrofit Kit

Parts List:


2 each Plastic Receiving Pieces 2 each Plastic Bullets 2 each Screws



Patented



Patented

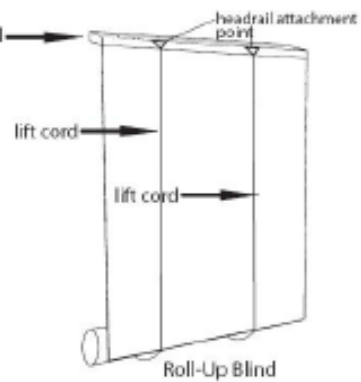

To retrofit your blind with a release clip, follow these 6 easy steps:

1. Remove Roll-Up Blind from window
2. Untie the lift cords from the headrail attachment point.
3. Thread the loose ends of the lift cords through the eyes in the Plastic Bullets and tie knots.
4. Screw receiving pieces into headrail approximately 1/2" outside of each lift cord attachment point.



5. Insert Plastic Bullet into the bottom of the Plastic Receiving Piece.



To test the correct installation, apply pressure to each lift cord. If the Retrofit Kit is installed correctly, the Plastic Bullet will release from the Plastic Receiving Piece with gentle pressure. Please re-insert bullet after this step.

Congratulations! You are done.

All consumers may choose alternate instruction set for installation below:

Retro-Fit Kit and Instructions Rollup Style Blinds

Warning: Strangulations can occur if the lifting loops slide off the side of the blind and a child's neck becomes entangled on the free-standing loop or if a child places his/her neck between the lifting loop and the roll-up blind material.



Retrofit Components

OPERATING INSTRUCTIONS

- To lower the blind, simply disconnect the locking device and slowly lower the blind by hand
- To raise the blind, simply roll up the blind by hand and lock the clips in place.

Step 1 –
Remove
the blind
from the
window.



Step 2 - Untie the cords from the back of the blind and pull all cords out of the blind. Store in a safe place, away from children, should you decide to restring your blind at a later date.



Step 3 - Raise the blind, by hand, to the top of the headrail leaving a 1/2" to 1" gap



Step 4 - Attach one of the receiving pieces to the blind.



Step 5 - Attach one of the plastic bullets to the blind.

Step 6 –
Repeat
Steps 4
and 5 on
the other
side of
the blind.



Step 7 - Insert the plastic bullet into the receiving piece.